

- (1) Show Status
  - (1) Fire Alarms
  - (2) Fire Warnings
  - (3) Faults
  - (4) Disablesments
  - (5) Detection Zones in Test
  - (6) Activated Outputs

- (1) Detection Zones
- (2) Points
- (3) Fire Alarm Devices
- (4) Fire Alarm Routing Equipment
- (5) Outputs
- (6) Fault Warning Routing Equipment
- (7) Immediate Output Actioning
- (8) All

- (2) Disable
  - (1) Detection Zones
  - (2) Points
  - (3) Fire Alarm Devices
  - (4) Fire Alarm Routing Equipment
  - (5) Outputs
  - (6) Fault Warning Routing Equipment
  - (7) Immediate Output Actioning

- (1) Door Control Units
- (2) Low Location Light Units
- (3) Standard Control Units
- (4) Other Outputs
- (5) Fire Alarm Devices
- (6) Fire Alarm Routing Equipment
- (7) Fault Warning Routing Equipment
- (8) All

- (1) Single Unit
- (2) All in Alarm Zone
- (1) Single Output
- (2) All in Operation Zone

- (3) Enable
  - (1) Detection Zones
  - (2) Points
  - (3) Fire Alarm Devices
  - (4) Fire Alarm Routing Equipment
  - (5) Outputs
  - (6) Fault Warning Routing Equipment
  - (7) Immediate Output Actioning

- (1) Single Unit
- (2) All in Alarm Zone
- (1) Single Output
- (2) All in Operation Zone

- (4) System
  - (1) Date and Time
  - (2) Information
  - (3) Access Level 3
  - (4) Printer
  - (5) Change Language
  - (6) Initialise
  - (7) Day / Night Timers

- (1) Enter Access Level 3 - Password
- (2) Leave Access Level 3
- (3) Set Password
- (4) Paper Feed
- (1) Start
- (2) Stop
- (3) Show Running Timers

- (5) Service
  - (1) Test
  - (2) Log
  - (3) Loop Commands
  - (4) Report

- (1) Detection Zone Test (EN 54)
- (2) Output Test
- (1) Fire Alarms
- (2) Prealarms
- (3) Early Warnings
- (4) Faults
- (5) Disable / Enable
- (6) User Operations
- (7) Tests
- (8) All Events
- (9) Log Setup
- (1) SV-Fault
- (2) Polluted

- (1) Enter Test Mode
- (2) Leave Test Mode
- (1) Manual Test On
- (2) Manual Test Off

- (1) Fire Alarm Devices
- (2) Fire Alarm Routing Equipment
- (3) Fault Warning Routing Equipment
- (4) Other Outputs

- (1) Clear Topology
- (2) Disable Loop
- (3) Enable Loop

- (1) Read Parameters
- (2) Read Filter
- (3) Clear Log

