

MP3 Music module - APS-26

AutoVoice BR-200
Product datasheet

Features

- MP3 Reader with high quality MP3 files playback near CD quality
- 3 digit LCD display; from 001 to 999 selection of songs
- Direct control of selection backwards/forward and play/pause
- Remote control with direct selection of songs/random/repeat A- > B memory Zone function
- Separate, front-panel volume, bass and treble controls

Description

- Use of module: As independent signal source or together with a music-source selector-switch APS-40
- Settings on module: Playback on the input bus M4, playback on bus BFS.
- Rear Panels (RWS): 2xRWS-0




Technical specifications	
Output level	0 dB (0.8 V)
Frequency response	20 Hz to 20 KHz (+/- 2 dB)
Distortions	<0.3 % (@1 KHz/0 dB)
Signal-to-noise ratio (S/N Ratio)	>70 dB (@1 KHz/0 dB)
Supply Voltage	17 VDC
Power consumption	2.5 W
Distance of the remote control	3 to 5 m
Current consumption (max.)	250 mA
Weight	0,490 kg

Part number	Description
116-BRG-APS26	MP3 Music module

Functions of the remote control

1. Programmed playback:
Press the PROG button one time and select the number of the 1st track. The number is visible in the display. When the track is audible press the PROG button again. Select the number of the 2nd track etc. Then press the PLAY button and all memorized tracks will be played. To cancel the programming, press the STOP button 2 times.
2. Repeat mode:
 - a) Press the REP button one time and the display shows "R1": Repeated playback of the shown track.
 - b) Press the REP button the second time and the display shows "R ALL": Repeated playback function.
 - c) Press the REP button the third time and the display will eliminate "R" and cancel the repeated playback function.
3. Random playback:
 - a) Press the RAN button one time and the display blinks: The random playback is ready.
 - b) Press the RAN button once again and the display does not blink anymore: The random function is stopped.
4. Repeated playback of a zone within a track:
 - a) Start the playback of a track, press the button at the beginning and at the end of a zone: The area between this two points is repeated endless.
 - b) Press the button once again and the repeated playback is stopped.
5. Numeric buttons 0 to 9:
For the selection of track numbers.
6. Button Play/Pause:
Press once to start the playback and once again for a pause.
7. Stop button:
Press once to stop the playback.
Use the button Play/Pause for continue the Playback. Press twice for the last track;
To continue the playback at track 001
Press the button Play/Pause.
8. Previous button:
Press once for the previous track.
9. Next button:
Press once for the next track.

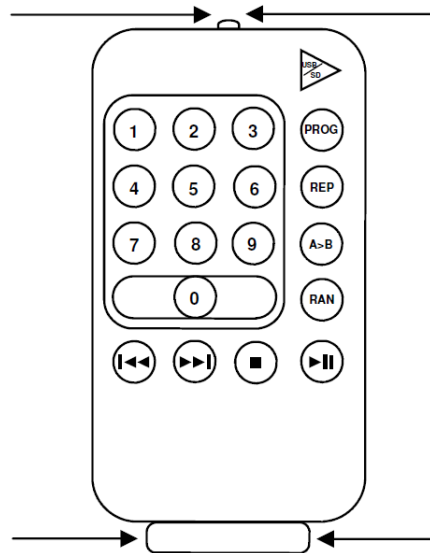

Infrared transmitter diode
Button USB/SD
(no function)

1 to 0: Numeric buttons
PROG: Program button

REP: Repeat button

A>B: Zone memory button

RAN: Random button

▶|| Button Play/Pause

■ Stop button

▶▶| Next button

||◀◀ Previous button

Battery protection (remove before use)

AUTRONICA FIRE AND SECURITY AS

Head office, Trondheim, NO-7483 Norway Tel: +47 73 58 25 00, fax: +47 73 58 25 01, e-mail: info@autronicafire.no
Oil and Gas division, Stavanger, Norway Tel: +47 51 84 09 00, fax: +47 51 84 09 99
Maritime division, Spikkestad, Norway Tel: +47 31 29 55 00, fax: +47 31 29 55 01

Visit Autronica Fire and Security AS' website: www.autronicafire.com