

In the Event of a Fire Alarm









ALARM indicator: blinking.

Fire Brig. Signalled indicator: steady light.

The internal buzzer is activated.






The text display indicates the detection zones in alarm state and their location.


Step	Actions to be taken
1	Follow all precautions described in the local fire instructions, step by step.
2	To silence the internal buzzer, press the Mute Panel button 
3	Press 
4	Observe the zone(s) in Alarm State (display). <i>If necessary, press  or digit 1 for more detailed information, then press  to return to previous level.</i>
5	Investigate the scene(s) and carry out the necessary actions.
6	To silence all alarms, press the Silence Alarms button. 
7	Press the Reset button. 

In the Event of a Fire Warning

The internal buzzer is activated.




The text display indicates the detection zones in this state and their location.

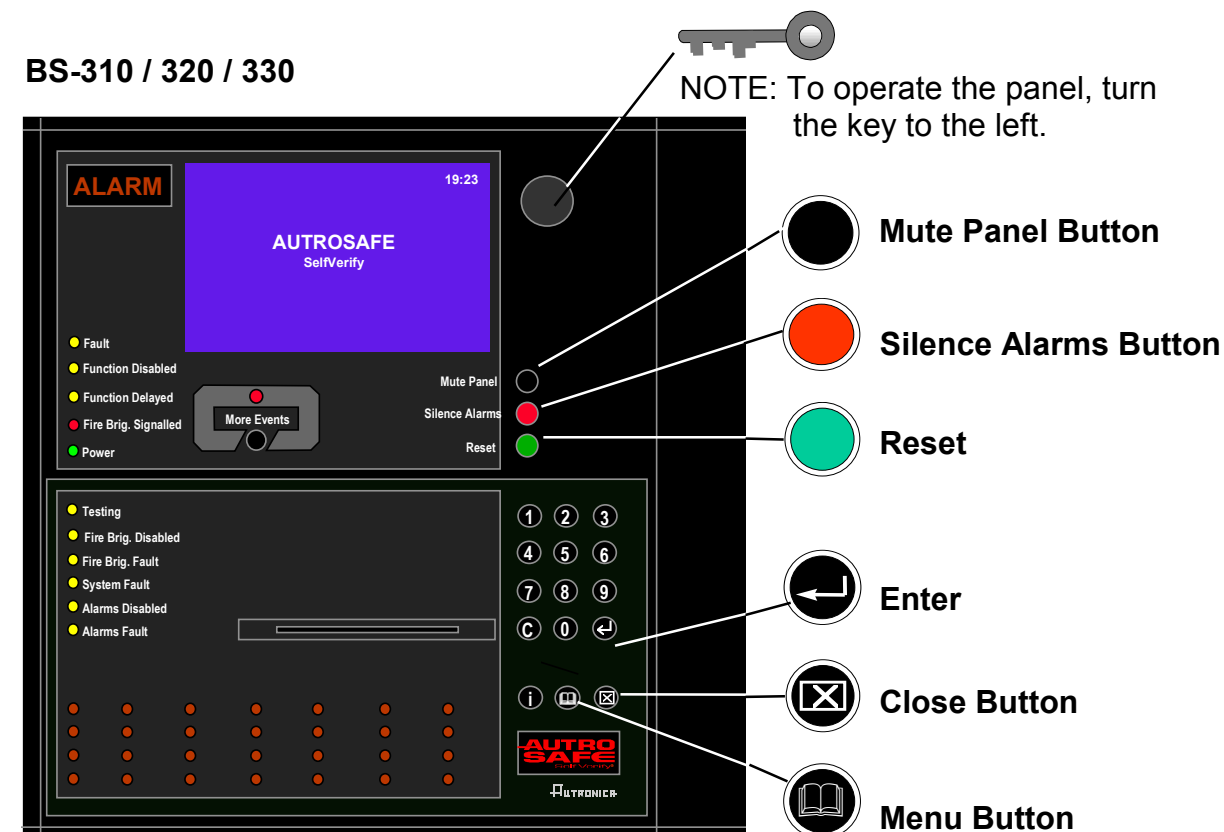Step	Actions to be taken
1	Follow all precautions described in the local fire instructions, step by step.
2	To silence the internal buzzer, press the Mute Panel button 
3	Press 
4	Observe the zone(s) in Fire Warning state (display). <i>If necessary, press  or digit 1 for more detailed information, then press  to return to previous level.</i>
5	Investigate the scene(s) and carry out the necessary actions.
6	To accept the selected Fire Warning, press digit 4 (ACCEPT FIRE WARNING).
7	Press the Reset button. 



In the Event of Faults

Fault indicator: Blinking light when unaccepted fault warnings exist. The text display indicates the nature of the fault. The internal buzzer is activated.

Step	Actions to be taken
1	Notify service personnel.
2	To silence the internal buzzer, press the Mute Panel button 
3	Press 
4	Observe the Fault Warnings.
5	Investigate the scene(s) and carry out the necessary actions, i.e. repair the faults.
6	If there are several fault warnings, select by scrolling with the arrow buttons, then press 
7	To accept the selected fault warning, press digit 3 (ACCEPT FAULT WARNING).

Contact your local *Autronica Service Team* when service is required. Autronica Fire and Security AS, 7483 Trondheim, Norway. Phone: + 47 73 58 25 00, fax: + 47 73 58 25 01.

I tilfelle Brannalarm



ALARM indikator: blinker.

Alarmsender Aktivert indikator: fast lys.

Den interne summeren er aktivert.

I displayet vises de deteksjonssonene som er i alarm, og alarmstedet.

Punkt	Aksjon
1	Følg lokal branninstruks punkt for punkt.
2	For å avstille den interne summeren, trykker man Avstill summer-knappen 
3	Trykk 
4	Observer sone(r) i alarm i displayet. <i>Om nødvendig, trykk  eller talltast 1 for mer detaljert informasjon, trykk deretter  for å gå tilbake til forrige nivå.</i>
5	Undersøk alarmstedet og iverksett nødvendige tiltak.
6	For å avstille alle alarmer trykker du Avstill klokke-knappen. 
7	Trykk Tilbakestill-knappen. 

I tilfelle Forvarsel

Den interne summeren er aktivert.


I displayet vises de deteksjonssonene som gir forvarsel, og forvarselsstedet.

Punkt	Aksjon
1	Følg lokal branninstruks punkt for punkt.
2	For å avstille den interne summeren, trykker man Avstill summer-knappen 
3	Trykk 
4	Observer sone(r) i forvarsel i displayet. <i>Om nødvendig, trykk  eller talltast 1 for mer detaljert informasjon, trykk deretter  for å gå tilbake til forrige nivå.</i>
5	Undersøk forvarselsstedet og iverksett nødvendige tiltak.
6	For å kvittere et forvarsel, trykk talltast 4 (KVITTER FORVARSEL).
7	Trykk Tilbakestill-knappen. 

BS-310 / 320 / 330



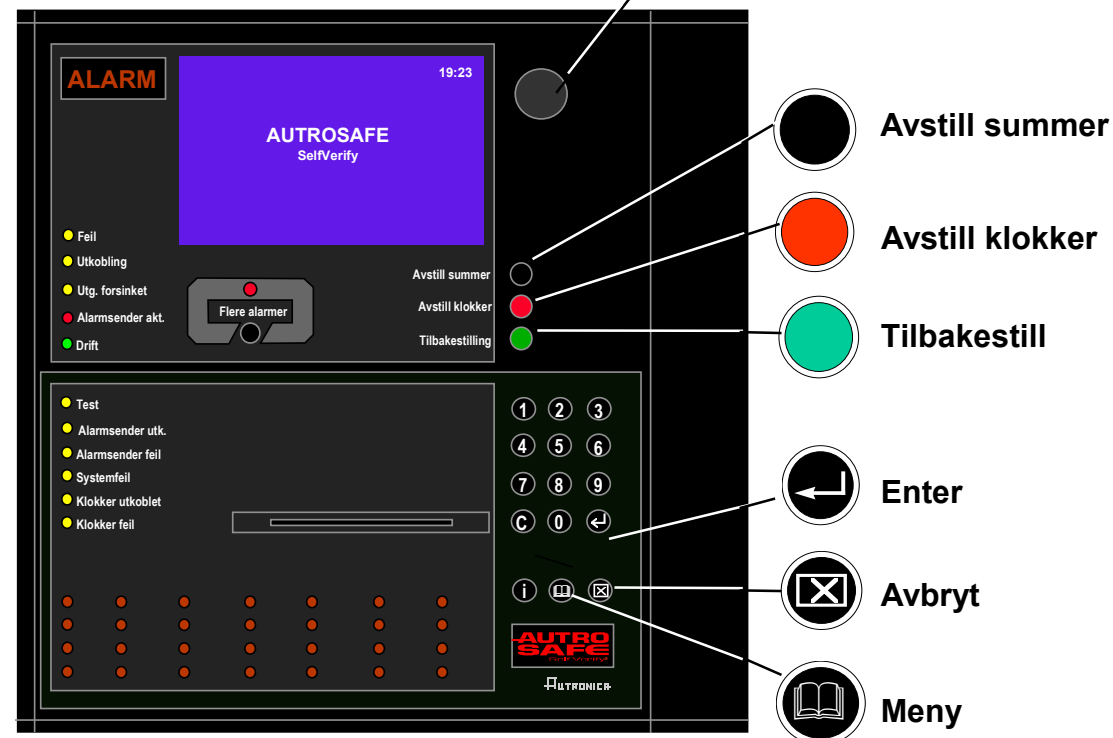


MERK: Vri nøkkelen til venstre for å betjene panelet.



I tilfelle feil

Feil indikator: Blinkende lys når feilvarsler ikke er kvitterte. Displayet viser type feil. Den interne summeren er aktivert.

Punkt	Aksjon
1	Varsle servicepersonell.
2	For å avstille den interne summeren, trykker man Avstill summer-knappen 
3	Trykk 
4	Legg merke til hvor feilvarselet kommer fra.
5	Undersøk feilstedet og iverksett nødvendige tiltak, f.eks. reparasjon av feil.
6	Hvis det er flere feilvarsel, velger du feilen du ønsker å kvittere ved å rulle med piltastene, trykk deretter 
7	For å kvittere valgt feilvarsel, trykk talltast 3 (KVITTER FORVARSEL).

Kontakt din lokale Autronica Service Team når det er nødvendig med service. Autronica Fire and Security AS, 7483 Trondheim, Norge. Telefon: 73 58 25 00, telefaks: 73 58 25 01.