

Fire Alarm Control Panel BS-60



Operator's handbook

Program version
P1-BS60-202E-0



Protecting life, environment and property..

Contents

	Page
1. Control panel	4
2. Prewarning	5
2.1 Indications on the control panel at “Prewarning”	5
2.2 Actions to be taken at “Prewarning” :.....	5
3. Fire alarm	7
3.1 Indications on the control panel at “Fire alarm”	7
3.2 Actions to be taken at “Fire alarm” :.....	7
4. More alarms (Multiple alarms)	9
4.1 Indications on the control panel at “More alarms” :	9
4.2 Actions to be taken at “More alarms” :.....	9
5. Fault	11
5.1 Indications on the control panel at “Fault” :	11
5.2 Actions to be taken at “Fault” :.....	11
5.3 Fault signal from internal buzzer at processor fault or fault with the internal 5V	12
6. Menu	13
6.1 Menu structure	13
6.2 Menu operation	15
6.3 “MAIN MENU”	15
7. Out-/in-control	16
7.1 Disable	16
7.1.1 Disablement of address	17
7.1.2 Disablement of zone	18
7.1.3 Disablement of Fire-Brigade/Fighters (BMA, BMF)	19
7.1.4 Disablement of sounder (AK-circuit)	19
7.1.5 Disablement of controls	20
7.1.5.1 Disablement of zone controls.....	21
7.1.5.2 Disablement of Control-1	22
7.1.5.3 Disablement of Control-2	22
7.2 Restore	23
7.2.1 Restoring of address(es).....	23
7.2.2 Restoring of zone	24
7.2.3 Restoring of Fire Brigade/Fighters (BMA/BMF)	24
7.2.4 Restoring of sounders	25
7.2.5 Restoring of controls.....	25
7.2.5.1 Restoring of zone control.....	25
7.2.5.2 Restoring of Control-1	26
7.2.5.3 Restoring of Control-2	26
7.3 Alarm delay.....	27
8. Test	29
8.1 Test Frontpanel / buzzer.....	29
8.2 Test BMA/BMF	30
8.3 Test fault	30
8.4 Test sounders	31

8.5	Test controls.....	31
8.5.1	Test zone-controls.....	31
8.5.2	Test Control-1.....	32
8.5.3	Test Control-2.....	32
8.6	Test alarm.....	32
9.	Show status	33
9.1	Show status prewarning.....	33
9.2	Show status fault.....	34
9.3	Show status disablements.....	35
9.4	Show-status Stored-events.....	37
10.	System	38
10.1	Sensitivity.....	38
10.1.1	Addresses.....	39
10.1.1.1	Single addresses.....	39
10.1.1.2	Total.....	39
10.1.2	Beyond-limits.....	40
10.2	Internal.....	40
10.2.1	Program version.....	41
10.2.2	Adjust-clock.....	41
10.2.3	Show-clock.....	41
10.3	Configuration.....	42
11.	Service	42

1. Control panel

The operating panel consists of a text display (information window), indication lamps, operation buttons and a number key-pad.

With these controls and indication devices, the entire fire alarm system is controlled.

Indication devices:

- MORE ALARMS**
Red lamp lights when more alarms are present.
- FIRE**
Red lamps lights in alarm condition.
- These three amber (yellow) lamps will have custom designed text:
- DEVICES (STILL) IN ALARM COND.**
Amber (yellow) lamp lights when a address is automatically disabled.
- PREWARNING**
Amber (yellow) lamp lights with a pulsating light when a prewarning has occurred.
- FUNCTION DISABLED**
Amber (yellow) lamp lights when the system is partly disabled (isolated).
- FAULT**
Amber (yellow) lamp lights for any fault.
Pulsating light.
- Buzzer**
The operating panel has a built-in buzzer which is activated when there is an alarm, prewarning or fault condition.

Operation keys:

- Text display:**
(Information window). This gives information about all the events in the system and is used to programme the control as well.
- MORE ALARMS**
When the black button is pressed, the current alarms in queue are shown in the text display.
- SILENCE/RESOUND SOUNDERS**
When the red button is pressed, all alarm devices and the internal buzzer are switched off/on..
- RESET**
When the green button is pressed, the whole system are reset.
- ZONE**
These lamps lights and show zones in alarm state.
- ZONE**
These lamps lights and show disabled zones.
- Number key-pad**
The number key-pad is used to do menu selections.

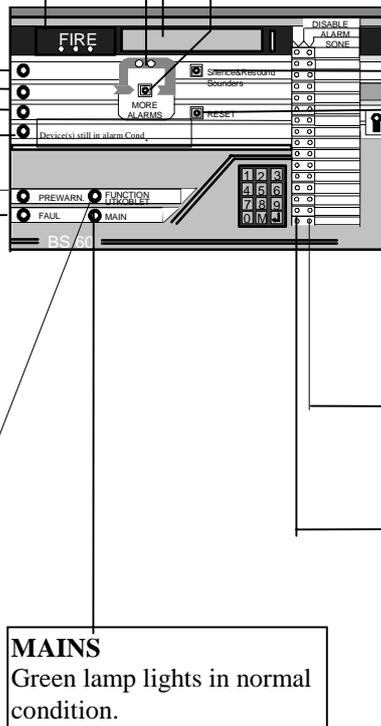


Fig. no. 1: BS-60 front panel with text display, indication lamps, operation buttons and a number key-pad.

Prewarning


2. Prewarning

Indications

2.1 Indications on the control panel at “Prewarning”

The amber (yellow) lamp lights with pulsating light when a prewarning has occurred.

The internal buzzer is activated.

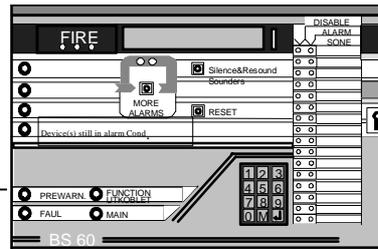

Example of text in the display:

FW 1, ZONE NO: 3 ADDRESS: 14
INVESTIGATE PREWARNING LOCATION

If there is a slowly developed fire, the PREWARNING lamp will light before the lamps in the fire sign light up.

Treat the prewarning as a normal fire alarm.

Actions

2.2 Actions to be taken at “Prewarning”:

- A. **Follow all precautions described in the local fire instructions step by step.**
- B. Open the control panel door.
- C. Press “SOUNDER SILENCE”.
The built-in buzzer will be turned off, but emits a sound signal every fourth minute as long as the door is open.

The PREWARNING indication lamp will now change to steady light.
- D. Investigate the scene of fire and carry out the necessary actions.
- E. Press “RESET”.

The following text will appear in the display:

RESET PROCEDURE IN PROGRESS
WAIT

This text will remain for 60 seconds. (The seconds are counted in the display with one point appearing for every second from 0 to 30 seconds, and then the following 30 seconds are counted down by the removal of one point every second from 30 to 0.)

The reset procedure is executed in this 60 second period.

If everything is normal the following text will appear in the display:

RESET OK
NORMAL CONDITION

F. Close the door

Fire alarm

3. Fire alarm

Indications


3.1 Indications on the control panel at “Fire alarm”

The red FIRE indication lamps lights with pulsating light.

The red lamps light and show which zone is in an alarm state (the yellow lamps show disablements).

The internal buzzer is activated.

All sounders connected to the fire alarm system are activated.

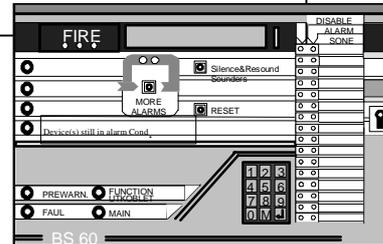

Example of text in the display:

AL 1, ZONE NO: 3 ADDRESS NO: 14

This text states that an alarm has been sounded from the detector with address no. 14 in zone no. 3.

If there is a fire slowly developed, the PREWARNING lamp will light before the lamps in the fire sign light.

Actions

3.2 Actions to be taken at “Fire alarm”:

- A: Follow the precautions described in the local fire instruction step by step.**
When the scene of the fire is investigated and the necessary actions are carried out, the sounders may be switched off.
- B: Open the control panel door.**
- C: Press SILENCE/RESOUND SOUNDERS**

All the alarm devices will be stopped, including the internal buzzer. (The panel buzzer will emit a sound signal every fourth minute as long as the door is open). If the key is pressed once again the alarm devices will start up again. See sec. 7.3 “Set alarm delay” for more information.

All the alarm sounder outputs from the control panel will be turned off when the operation key "SILENCE/RESOUND SOUNDERS" button is pressed the first time. However, the message to the Fire Brigade/Fighters (BMA-) is not turned off.

D: FIRE lights with a steady light.

See section 4 if the lamp MORE ALARMS lights.

When the scene of the fire is investigated and the necessary actions are carried out, reset the fire alarm control panel to normal condition.

E: Press "RESET"

The following text will appear in the display:

**RESET PROCEDURE IN PROGRESS
WAIT.....**

This text will remain for 60 seconds.

(The seconds are counted in the display with one point appearing for every second from 0 to 30 seconds, and then the following 30 seconds are counted down by the removal of one point every second from 30 to 0.)

If everything is normal the following text will appear in the display:

**RESET OK
NORMAL CONDITION**

F: Close the door

Normal condition means that the door on the control panel is closed and only the MAINS lamp is lit.

After resetting, an address may still be in an alarm state. This can be due to mechanical damage, water damage, presence of smoke still in the detector's chamber or a technical fault.

If there is any address in an alarm state after resetting, it will be automatically disabled and isolated from the rest of the system.

The following text will appear in the display:

**1 ALARM ADDRESS(ES) IS DISABLED
CONTROL PANEL IN ABNORMAL CONDITION**


Contact Autronica's service department to repair any fault so that the detector(s) can return to normal condition.

More alarms

4. More alarms (Multiple alarms)

Indications

4.1 Indications on the control panel at “More alarms”:

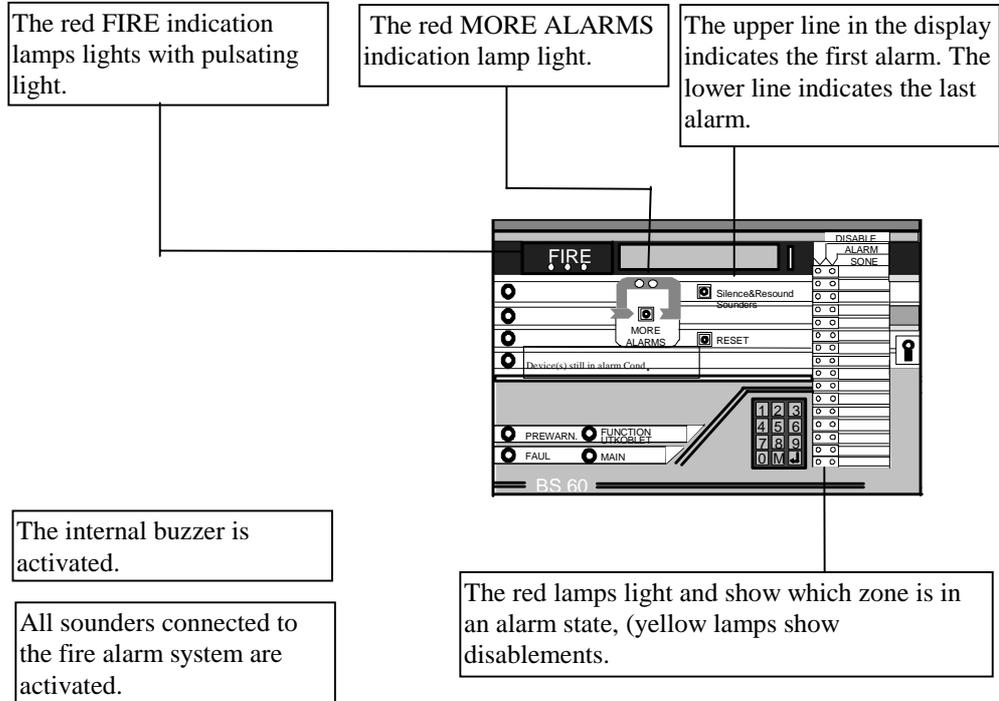

The display then indicates the number of the first and last alarm together with the zone number and the detector address.

When more alarms are registered the text in the display may appear as follows:

AL 1,	ZONE NO: 3	ADDRESS NO: 14
AL 3,	ZONE NO: 6	ADDRESS NO: 35

NOTE! The last alarm will appear in the lower line in the display.

Actions

4.2 Actions to be taken at “More alarms”:

A: Follow the procedure as given in section 3 A - F.

B: In order to find out which alarms are in between the first and the last alarm, press the operation key “MORE ALARMS”.

The alarms in between will then appear in the lower line in the text display, one for each press on the key.

The alarms will appear in order, i.e. alarm no 2 will appear with the first press on the key (alarm number one will always remain in the top line), alarm number three with the second press of the key, alarm number four with the third press etc.


When you have gone through all the alarms, the text will show that you have returned back to alarm number two and the built-in buzzer will emit a signal.

Fault

5. Fault

Indications

5.1 Indications on the control panel at “Fault”:

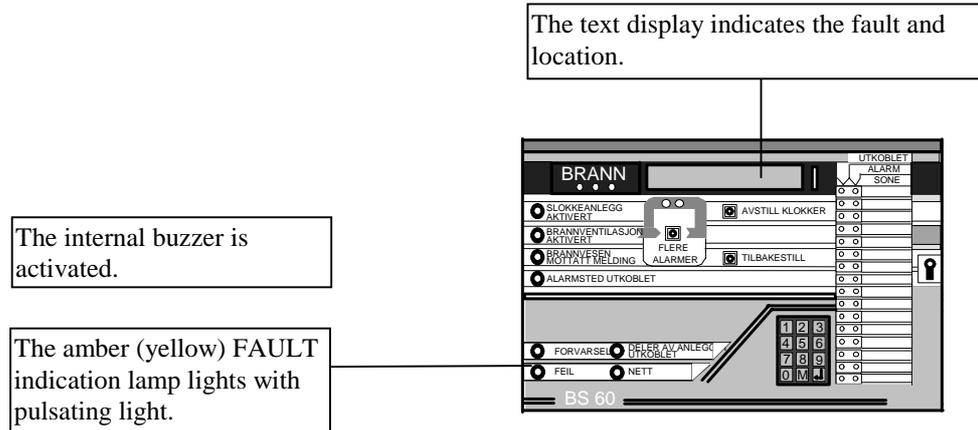

If the main processor stops, the internal buzzer is activated.

By fault condition a fault message appears in the display. For example:

FA 1, ZONE NO: 3 ADDRESS NO: 14

Actions

5.2 Actions to be taken at “Fault”:

A: Open the door.

B: Press “SILENCE/RESOUND SOUNDERS”.

(The built-in buzzer emits a sound signal every fourth minute as long as the door is open).

FAULT lights with a steady light.

C: Press “RESET”.

The following text will appear in the display:

**RESET PROCEDURE IN PROGRESS
WAIT ...**

**RESET OK
NORMAL CONDITION**

D: Close the door.

E: If there is still a fault, contact Autronica's service department to repair any fault so the control panel can return to normal operation.

**Fault on
processor or
internal 5V**

5.3 Fault signal from internal buzzer at processor fault or fault with the internal 5V

- Loss of internal 5V will give continuous signal in the internal buzzer.
- Processor fault will give pulsing- or continuous signal in the internal buzzer.
- At both fault types the display will be dark or the text will be locked.


Menu

6. Menu

Menu structure

6.1 Menu structure

The whole menu structure is shown here, but “CONFIGURATION” and “SERVICE” is described in the “Commissioning handbook” - BS-60.

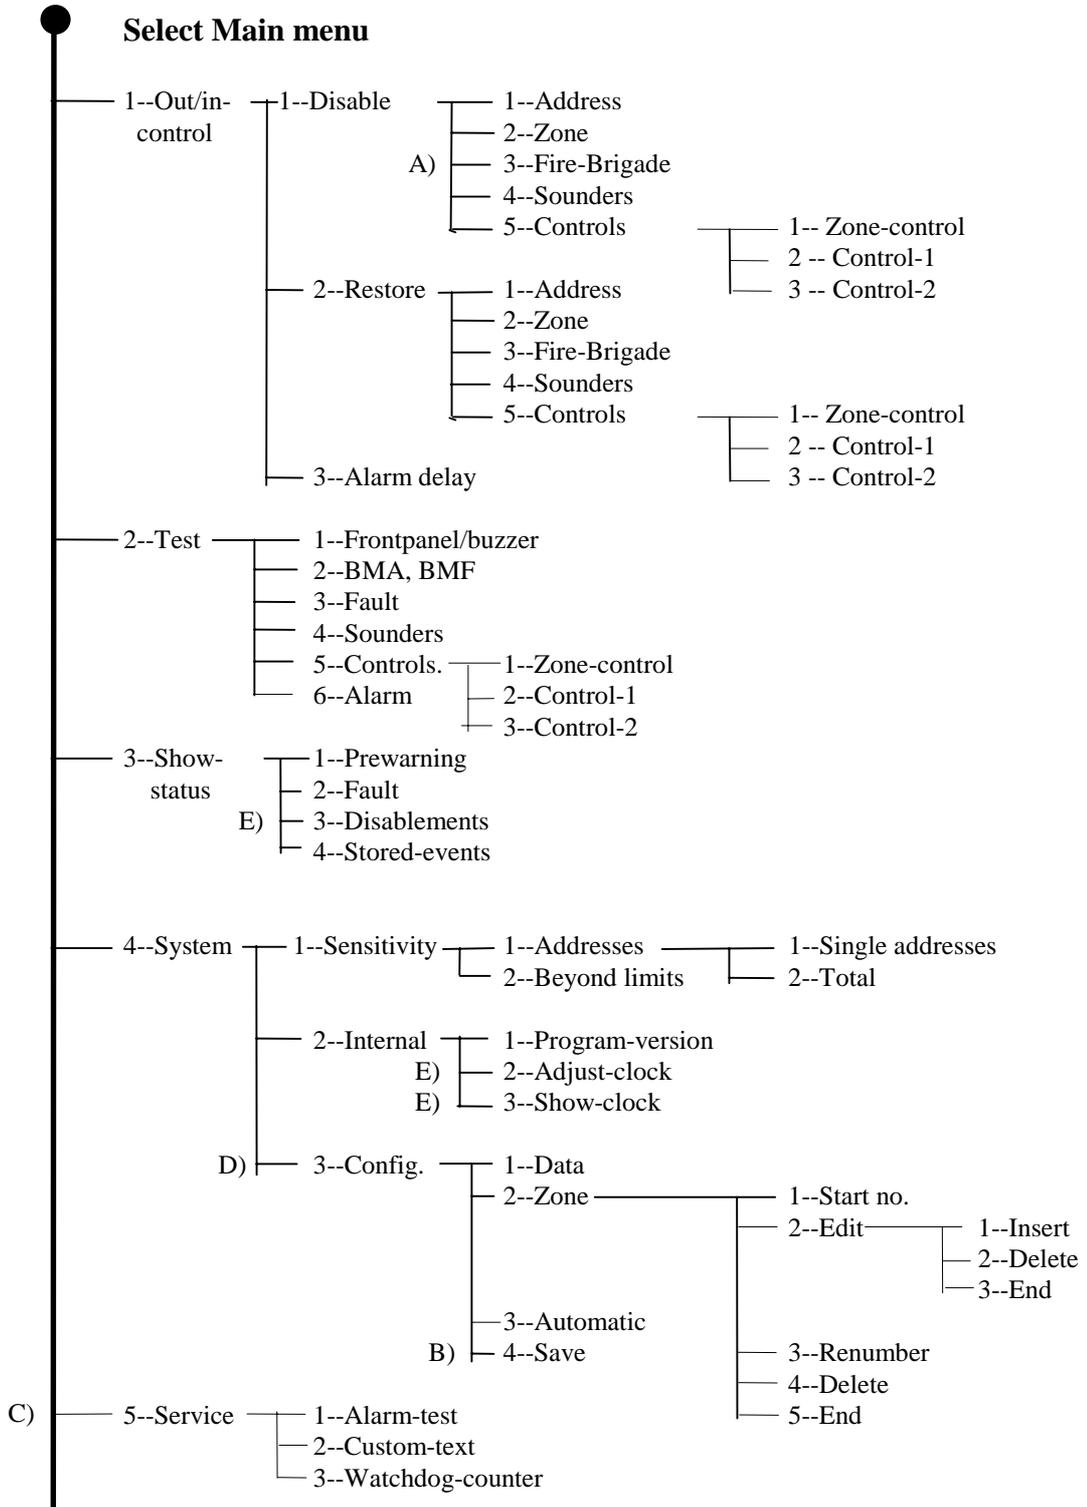

REMARKS A) - E) IN ABOVE MENU STRUCTURE

- A) The “DISABLE SOUNDERS” function is password protected for the English version..
- B) The “SAVE” function is always password protected (special requirements are set to OFF, SOLAS or LPC).
- C) The “SERVICE” function is always password protected (special requirements are set to “OFF”, SOLAS or LPC.)
The “SERVICE” function is described in the “Commissioning handbook” - BS-60.
- D) The DIP-switch 18.7 has to be in position “OFF” to reach the “CONFIGURATION” function. The “CONFIGURATION” function is described in the “Commissioning handbook” - BS-60.
- E) The DIP-switch 18.7 has to be in position “ON” to reach the “STORED-EVENTS”, “CUSTOM-TEXT”, “ADJUST-CLOCK” and “SHOW-CLOCK” functions.

Operation

6.2 Menu operation

All information given in this section is closely related to the MENU structure given in section 6.1.

Please confer this structure when reading the following information.

By pressing the "MENU" key, the system always returns to the main menu.

Values which are used are default values from the factory. All values can be changed by using the key-pad. Remember to save the values before closing the door.

Main menu

6.3 "MAIN MENU"

When the control panel door is opened, the following text will appear in the display:

**AUTRONICA FIRE ALARM SYSTEM BS-60
USERS MENU**

When the alarm delay is activated, the following text will appear in the display:
(See section 7.3).

ALARM DELAY H.MM HOUR(S)

H - Hours


MM - Minutes

By pressing the "MENU" key, the following text will appear in the display:

MAIN MENU:	1:OUT/IN-CONTROL	2:TEST
3: SHOW-STATUS	4:SYSTEM	5:SERVICE

Out-/in-control

7. Out-/in-control

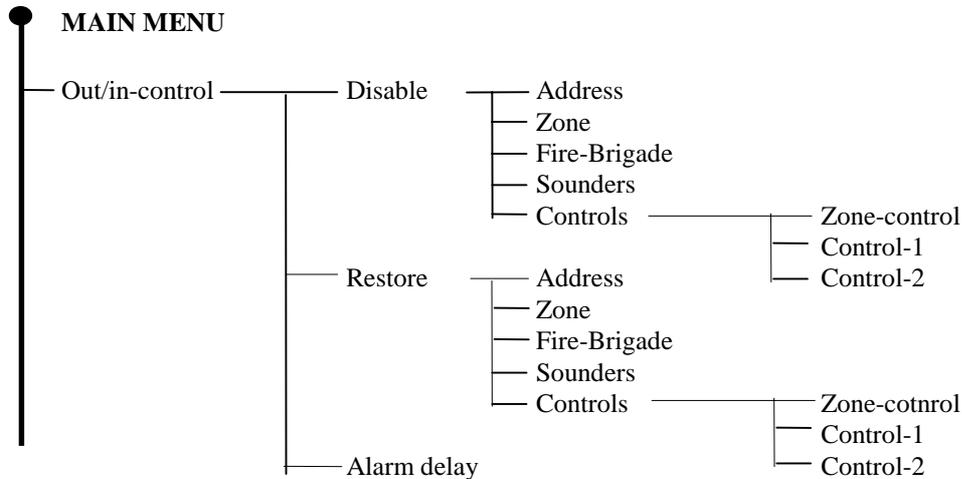

Select “OUT/IN-CONTROL” function by pressing “1” in the “MAIN MENU”.

The following text will appear in the display:

OUT/IN-CONTROL	1:DISABLE	2:RESTORE
	3:SET ALARM DELAY	

Disable

7.1 Disable

When disabling parts of the system, the amber (yellow) lamp “FUNCTION DISABLED” on the front of the control panel will light as long as the disabling lasts.

The maximum disable time is 98 hours.

By selecting disable time of 99 hours, the function will be disabled for ever.

Select “DISABLE” function by pressing “1” in the “OUT/IN-CONTROL”-menu.

The following text will appear in the display:

DISABLE :	1:ADDRESS	2:ZONE
3:FIRE-BRIGADE	4:SOUNDERS	5:CONTROLS

To reach this function rapidly, press “1” when the front door is opened.

For the LPC program version the internal buzzer will be activated approx. every 5 sec. while some parts are disabled.

**Disabling of
one address****7.1.1 Disabling of address**

When disabling an address (detector or a manual call-point), the address will be isolated and will not operate at ALARM.

Select "ADDRESS" by pressing "1" in the "DISABLE"-menu.

```
DISABLE ADDRESS(ES)
SELECT ADDRESS (01 - XX): 00
```

XX is highest used address.

Select the address to be disabled and press ↵. The address will now appear twice. By pressing ↵ again only the current address will be disabled.

**Disabling of
a group of
addresses**

To disable a group of addresses, enter start and stop address, and press ↵. When disabling a group of addresses, no manual call-points will be disabled.

If all addresses in a zone are disabled, the lamp "DISABLING ZONE" will light with an amber (yellow) light as long as the disabling lasts.

The following text will appear in the display:

```
nn ADDRESS(ES) ENTERED FOR DISABLEMENT
ENTER DISABLE TIME (HOURS): 02
```

nn is number of addresses to be disabled.

Enter number of hours (disable time), and press ↵.

```
DISABLEMENT OF ADDRESS(ES) OK
NUMBER: nn, TOTAL: NN, PRESS 'MENU'
```

nn is the number of addresses which was disabled.

NN is the total number of addresses which are disabled.

Disablement of zone**7.1.2 Disablement of zone**

When disabling zone(s), the zone(s) will be isolated and will not operate at alarm, unless a manual call-point is activated.

The lamp “ZONE DISABLED” in addition to the lamp “FUNCTION DISABLED” will light with a amber (yellow) light as long as the disabling lasts.

Select “ZONE” by pressing “2” in the “DISABLE”-menu.

The following text will appear in the display:

```
DISABLE ZONE  
SELECT ZONE-NUMBER: 000
```

Select the zone to be disabled and press ↵.

The following text will appear in the display:

```
DISABLEMENT OF ZONE NO: YYY  
ENTER DISABLE TIME (HOURS): 02
```

YYY is the selected zone to be disabled.

Enter the number of hours (disable time) and press ↵.

The following text will appear in the display:

```
DISABLEMENT OF ZONE NO: YYY OK  
PRESS 'MENU'
```

YYY is the disabled zone.

If an unused zone number is selected, the following text will appear in the display:

```
ACCESS OF ZONE: YYY IS BLOCKED  
PRESS 'MENU'
```

YYY is the selected zone to be disabled.

**Disablement of
Fire-Brigade****7.1.3 Disablement of Fire-Brigade/Fighters (BMA, BMF)**

When disabling the Fire Brigade/Fighters output, no message to the Fire-Brigade/Fighters at fire alarm or fault will be given.

A amber (yellow) lamp “CUSTOM DESIGNED TEXT” might light (in addition to the lamp “FUNCTION DISABLED” as long as the disablement lasts.

Select “FIRE BRIGADE” by pressing “3” in the “DISABLE”-menu.

The following text will appear in the display:

**DISABLEMENT OF FIRE BRIGADE OUTPUT
ENTER DISABLE TIME (HOURS): 02**

Enter number of hours (disable time) and press ↵.

The following text will appear in the display:

**DISABLEMENT OF FIRE BRIGADE OUTPUT OK
PRESS 'MENU'**

**Disablement of
sounders****7.1.4 Disablement of sounder (AK-circuit)**

When disabling sounders output(s) the sounder(s) will not be activated at alarm.

A amber (yellow) lamp “CUSTOM DESIGNED TEXT” might light (in addition to the lamp “FUNCTION DISABLED” as long as the disablements lasts.

Select “SOUNDERS” by pressing “4” in the “DISABLE”-menu.

The following text will appear in the display for the English version:

ENTER PASSWORD:

Enter the password and press ↵.

The following text will appear in the display:

**DISABLE SOUNDER(S)
SELECT SOUNDER-OUTPUT: 00**

Disablement of all sounder

By pressing ↵ at sounder-output 00, all sounder-outputs will be selected for disablement, and the following text will appear in the display:

**DISABLEMENT OF ALL SOUNDER-OUTPUTS
ENTER DISABLE TIME (HOURS): 02**

Enter number of hours (disable time) and press ↵.

The following text will appear in the display:

**DISABLEMENT OF 4 SOUNDER-OUTPUTS OK
PRESS 'MENU'**

Disablement of sounders one by one

To disable one sounder-output, select the sounder-output to be disabled, and press ↵.

The following text will appear in the display:

**DISABLEMENT OF SOUNDER-OUTPUT: PP
ENTER DISABLE TIME (HOURS): 02**

PP is the selected sounder-output to be disabled.

Enter number of hours (disable time) and press ↵.

The following text will appear in the display:

**DISABLEMENT OF SOUNDER-OUTPUT: PP OK
PRESS 'MENU'**

PP is disabled sounder-output.

Disablement of controls**7.1.5 Disablement of controls**

Select "CONTROLS" by pressing "5" in the "DISABLE"-menu.

The following text will appear in the display:

**DISABLE CONTROLS:
1:ZONE-CONTR. 2:CONTROL-1 3:CONTROL-2**

Disabling of zone controls**7.1.5.1 Disabling of zone controls**

When disabling the zone-control(s), the zone-control(s) will not be activated at alarm in the connected zone.

Select "ZONE-CONTR." by pressing "1" in the "DISABLE CONTROLS"-menu, and the following text will appear in the display:

**DISABLE ZONE-CONTROL(S)
SELECT ZONE-CONTROL: 000**

By pressing ↵ at zone-control 000, all zone-controls will be selected for disabling, and the following text will appear in the display:

**DISABLEMENT OF ALL ACTIVE ZONE-CONTROLS
ENTER DISABLE TIME (HOURS): 02**

Enter number of hours (disable time) and press ↵.

The following text will appear in the display:

**DISABLEMENT OF NN ZONE-CONTROL(S) OK
PRESS 'MENU'**

NN is the number of active zone-controls which is disabled.

Disabling of zone-controls one by one

To disable one zone-control, select the zone-control to be disabled, and press ↵.

The following text will appear in the display:

**DISABLEMENT OF ZONE-CONTROL: ZZZ
ENTER DISABLE TIME (HOURS): 02**

ZZZ is the selected zone-control to be disabled.

Enter the number of hours (disable time) and press ↵.

The following text will appear in the display:

**DISABLEMENT OF ZONE-CONTROL: ZZZ OK
PRESS 'MENU'**

ZZZ is the number of disabled zone-controls.

If an unused zone-control is selected, the following text will appear in the display:

**ACCESS OF ZONE-CONTROL ZZZ IS BLOCKED
PRESS 'MENU'**

ZZZ is the selected zone-control to be disabled.

**Disablement of
Control-1****7.1.5.2 Disablement of Control-1**

When disabling Control-1 output, the Control-1 will not be activated at alarm.

Select "CONTROL-1" by pressing "2" in the "DISABLE CONTROLS"-menu, and the following text will appear in the display:

**DISABLEMENT OF CONTROL-1
ENTER DISABLE TIME (HOURS): 02**

Enter number of hours (disable time) and press ↵.

The following text will appear in the display:

**DISABLEMENT OF CONTROL-1 OK
PRESS 'MENU'**

**Disablement of
Control-2****7.1.5.3 Disablement of Control-2**

When disabling Control-2 output, the Control-2 will not be activated at alarm or prewarning.

Select "CONTROL-2" by pressing "3" in the "DISABLE CONTROLS"-menu, and the following text will appear in the display:

**DISABLEMENT OF CONTROL-2
ENTER DISABLE TIME (HOURS): 02**

Enter number of hours (disable time) and press ↵.

The following text will appear in the display:

**DISABLEMENT OF CONTROL-2 OK
PRESS 'MENU'**

Restore**7.2 Restore**

Select "RESTORE" function by pressing "2" in the "OUT/IN-CONTROL"-menu.

The following text will appear in the display:

RESTORE:	1:ADDRESS	2:ZONE
3:FIRE-BRIGADE	4:SOUNDERS	5:CONTROLS

To reach this function rapidly, press "2" when the front door is opened.

Restoring of address(es)**7.2.1 Restoring of address(es)**

By restoring the address(es), the control panel will operate in normal fire detection condition.

Select "ADDRESS" by pressing "1" in the "RESTORE"-menu.

The following text will appear in the display:

RESTORE ADDRESS(ES) SELECT ADDRESS (01-XX): 00

XX is the highest used address.

Restoring of one address

Enter the address to be restored and press ↵. The address will now appear twice. By pressing ↵ again only the current address will be restored.

Restoring of a group of addresses

To restore a group of addresses, enter start and stop address and press ↵.

The following text will appear in the display:

RESTORE OF nn ADDRESS(ES) OK PRESS 'MENU'
--

nn is the number of addresses which are restored.

Restoring of zone**7.2.2 Restoring of zone**

By restoring the zone, all related addresses will be restored and operate in normal fire detection condition.

Select "ZONE" by pressing "2" in the "RESTORE"-menu.

The following text will appear in the display:

```
RESTORE ZONE
SELECT ZONE -NUMBER: 000
```

Select the zone-number to be restored and press ↵.

The following text will appear in the display:

```
RESTORE OF ZONE NO: YYY OK
PRESS 'MENU'
```

YYY is the restored zone.

If an unused zone is selected, the following text will appear in the display:

```
ACCESS OF ZONE: YYY IS BLOCKED
PRESS 'MENU'
```

YYY is the selected zone.

Restoring of Fire Brigade outputs**7.2.3 Restoring of Fire Brigade/Fighters (BMA/BMF)**

By restoring the Fire Brigade/Fighters output, the output will operate in normal condition, and message to the Fire Brigade/Fighters at fire alarm and fault will be given.

Select "FIRE BRIGADE" by pressing "3" in the "RESTORE"-menu.

The following text will appear in the display:

```
RESTORE OF FIRE BRIGADE OUTPUT OK
PRESS 'MENU'
```

Restoring of sounders**7.2.4 Restoring of sounders**

By restoring the sounder(s) the sounder(s) will operate in normal condition at fire alarm.

Select "SOUNDERS" by pressing "4" in the "RESTORE"-menu.

The following text will appear in the display:

```
RESTORE SOUNDER(S)
SELECT SOUNDER-OUTPUT: 00
```

Restoring of all sounder outputs

By pressing ↵ at sounder-output 00, all sounder-outputs will be restored, and the following text will appear in the display:

```
RESTORE OF 4 SOUNDER-OUTPUTS OK
PRESS 'MENU'
```

Restoring of the sounders one by one

To restore one sounder-output, select the sounder-output to be restored, and press ↵.

The following text will appear in the display:

```
RESTORE OF SOUNDER-OUTPUT: PP OK
PRESS 'MENU'
```

PP is the selected and restored sounder-output.

Restoring of controls**7.2.5 Restoring of controls**

Select "CONTROLS" by pressing "5" in the "RESTORE"-menu.

The following text will appear in the display:

```
RESTORE CONTROLS:
1:ZONE-CONTR. 2:CONTROL-1 3:CONTROL-2
```

Restoring of zone control**7.2.5.1 Restoring of zone control**

By restoring the zone-control(s), zone-control(s) will operate in normal condition at fire alarm.

Select "ZONE-CONTR." by pressing "1" in the "RESTORE CONTROLS"-menu.

The following text will appear in the display:

```
RESTORE ZONE-CONTROL(S)
SELECT ZONE-CONTROL: 000
```

Restoring of all zone-controls

By pressing ↵ at zone-control 000, all controls will be restored, and the following text will appear in the display:

**RESTORE OF 16 ZONE-CONTROL(S) OK
PRESS 'MENU'**

**Restoring of
zone-controls
one by one**

To restore one zone-control, select the zone-control to be restored and press ↵.

The following text will appear in the display:

**RESTORE OF ZONE-CONTROL: ZZZ OK
PRESS 'MENU'**

ZZZ is the selected zone-control.

If an unused zone is selected, the following text will appear in the display:

**ACCESS OF ZONE-CONTROL: ZZZ IS BLOCKED
PRESS 'MENU'**

ZZZ is the selected zone-control.

**Restoring of
Control-1**

7.2.5.2 Restoring of Control-1

By restoring the Control-1 output, the Control-1 will operate in normal condition at alarm.

Select "CONTROL-1" by pressing "2" in the "RESTORE CONTROLS"-menu.

The following text will appear in the display:

**RESTORE OF CONTROL-1 OK
PRESS 'MENU'**

**Restoring of
Control-2**

7.2.5.3 Restoring of Control-2

By restoring the Control-2 output, the Control-2 will operate in normal condition at alarm or prewarning.

Select "CONTROL-2" by pressing "3" in the "RESTORE CONTROLS"-menu.

The following text will appear in the display:

**RESTORE OF CONTROL-2 OK
PRESS 'MENU'**

Alarm delay

7.3 Alarm delay

Select “SET ALARM DELAY” function by pressing “3” in the “OUT/IN-CONTROL”-menu.

The following text will appear in the display:

```
ALARM DELAY
ENTER DURATION (HOURS): 08
```

Enter duration of alarm delay and press ↵.

Max. duration is 98 hours. By selecting a duration of 99 hours the alarm delay will last for ever.

To reach this function rapidly, press “3” when the front door is opened.

The following text will appear in the display:

```
AL 1, ZONE YYY, ADDRESS XXX
ALARM DELAY T1, TIMEOUT: tt MIN.
```

YYY is the current zone.

XXX is the current address.

tt is the duration of timeout.

When the alarm delay is activated, a alarm delay (T1) function will hold the controlling of sounders and BMA-circuit. (Fire Brigade/Fighters).

If the alarm is confirmed within the alarm delay (T1) by operating the “SILENCE/RESOUND SOUNDERS” button, an additional alarm delay (T2) will be activated.

The following text will appear in the display:

```
AL 1, ZONE YYY, ADDRESS XXX
ALARM DELAY T2, TIMEOUT: tt MIN.
```

When the “SILENCE/RESOUND SOUNDERS” button is operated within timeout (T2), the following text will appear in the display:

```
AL 1, ZONE YYY, ADDRESS XXX
ALARM IS VERIFIED
```

YYY is the current zone.


XXX is the current address

However, if the “SILENCE/RESOUND SOUNDERS” button is not operated within timeout of T1 and T2, the alarm is automatically released.

The second press on the “SILENCE/RESOUND SOUNDERS” button stops the activation of sounders - and BMA-circuit (Fire Brigade/Fighters).

The third press on the “SILENCE/RESOUND SOUNDERS” button will resound the sounders - and BMA-circuits.

Test

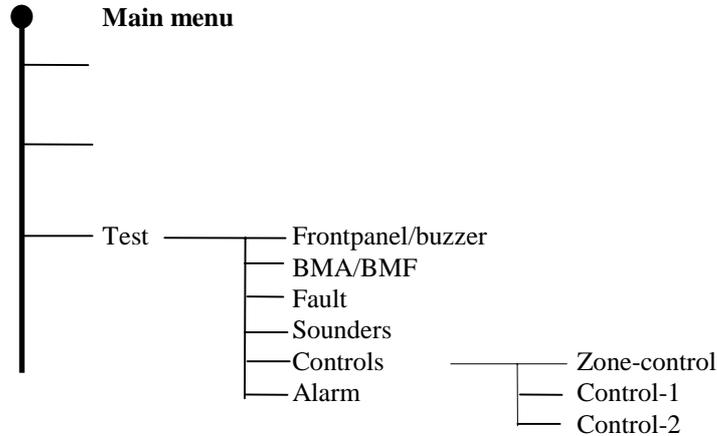8. Test

All tests will be terminated by pressing “MENU” or closing the door. If a fire alarm occurs, the tests will be terminated, and the alarm messages will appear in the display.

Select “TEST” function by pressing “2” in the “MAIN MENU”.

The following text will appear in the display:

**TEST1:FRONTPANEL/BUZZER 2:BMA/BMF
3:FAULT 4:SOUNDERS 5:CONTOLS 6:ALARM**

Test frontpanel/
buzzer**8.1 Test Frontpanel / buzzer**

Select “FRONTPANEL/BUZZER” by pressing “1” in the “TEST”-menu.

The following text will appear in the display:

DISPLAY TEST:

All characters used in the display will appear, and all indication lamps on the control panel front will light. The internal buzzer will be activated approx. every 5. sec.

To stop the test press “MENU”.

Test BMA/BMF

8.2 Test BMA/BMF

Inform the Fire Brigade/Fighters before the test is carried out !

Select "BMA/BMF" by pressing "2" in the "TEST"-menu.

The following text will appear in the display:

**TEST OF TRANSMISS. LINE TO FIRE BRIGADE
WHEN COMPLETED PRESS 'MENU'**

This function will activate the devices connected to the corresponding outputs.

Test fault

8.3 Test fault

Select "FAULT" by pressing "3" in the "TEST"-menu.

The following text will appear in the display:

TEST EARTH-FAULT ACTIVE

.....

This test simulate an earth-fault, and is a test of the earth-fault monitoring function.

An earth-fault message will be given. The earth-fault message will disappear by resetting the control panel.

When the earth failure test sequence is finished, the next sequence automatically will start.

The following text will appear in the display:

TEST ADDRESS FAULT ACTIVE

.....

The test process will take 1 minute. It is indicated by appearing dots in the display for the first half minute. Then the sequence is reversed the next half minute.

When the address fault active test sequence is finished, the next sequence will automatically start.

The following text will appear in the display:

TEST BATTERY ACTIVE

.....

This test sequence (which is a real battery load test) lasts for 10 seconds, and will normally not give any fault message.

When the test battery active sequence is finished, the main menu will appear.

Test sounders**8.4 Test sounders**

Select "SOUNDERS" by pressing "4" in the "TEST"-menu.

The following text will appear in the display:

**SOUNDER TEST
WHEN COMPLETED PRESS 'MENU'**

During the test sequence all sounder outputs will be activated. The sequence is interrupted/completed by pressing "MENU".

Test controls**8.5 Test controls**

Select "CONTROLS" by pressing "5" in the "TEST"-menu.

The following text will appear in the display:

**TEST CONTROLS:
1:ZONE-CONTR. 2:CONTROL-1 3:CONTROL-2**

Test zone-controls**8.5.1 Test zone-controls**

The devices connected to the zone-control outputs will be activated.

Select "ZONE-CONTR." by pressing "1" in the "TEST CONTROLS"-menu.

The following text will appear in the display:

**TEST ZONE-CONTR.NO: 000
WHEN COMPLETED PRESS 'MENU'**

Testing all zone-controls

When pressing ↵ at zone-control 000, all zone-controls will be tested.

Testing zone-controls one by one

To test the zone-controls one by one, select the zone-control to be tested. It is possible to test more than one at the time.

**TEST ZONE-CONTR.NO: ZZZ nn OUTP. IN TEST
WHEN COMPLETED PRESS 'MENU'**

ZZZ is the selected zone-control to be tested.

nn is the number of zone-control outputs in test.

**Test
Control-1****8.5.2 Test Control-1**

Select "CONTROL-1" by pressing "2" in the "TEST CONTROLS"-menu.

The following text will appear in the display:

**TEST OF CONTROL-1
WHEN COMPLETED PRESS 'MENU'**

The device connected to the Control-1 output will be activated.

**Test
Control-2****8.5.3 Test Control-2**

Select "CONTROL-2" by pressing "3" in the "TEST CONTROLS"-menu.

The following text will appear in the display:

**TEST OF CONTROL-2
WHEN COMPLETED PRESS 'MENU'**

The device connected to the Control-2 output will be activated.

Test alarm**8.6 Test alarm**

Inform the Fire Brigade/Fighters before the test is carried out !

The control panel will simulate an automatic alarm without changing the state of the panel. (The panel can not see the difference between a real alarm and a simulated alarm.)

The fire indicator lamps, zone indicator lamps, alarm devices and the internal buzzer will be activated when the test is carried out.

Select "ALARM" by pressing "6" in the "TEST"-menu and the following text will appear in the display:

TEST OF TOTAL ALARM, ADDRESS NO: 00

Enter address to be tested, press ↵, and the following text will appear in the display:

AL 1, ZONE NO.: YYY, ADDRESS XX


XX is the selected address to be tested.

YY is zone information.

Press "SOUNDER SILENCE" and "RESET" and the control panel will return to normal condition.

Show status

9. Show status

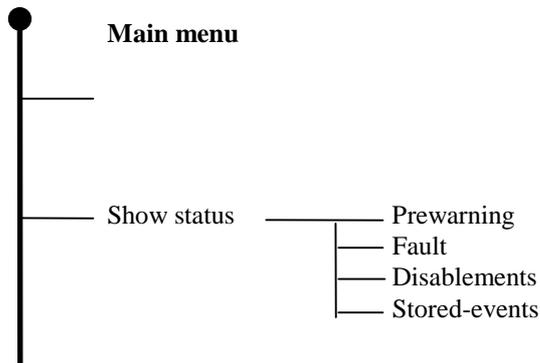

Select “SHOW STATUS” function by pressing “3” in the “MAIN MENU”.

The following text will appear in the display:

```

SHOW STATUS:  1:PREWARNING  2:FAULT
              3:DISABLEMENT  4:STORED-EVENTS
  
```

Show status
Prewarning

9.1 Show status prewarning

Select “PREWARNING” by pressing “1” in the “SHOW STATUS”-menu.

The following text will appear in the display:

```

SHOW STATUS PREWARNING
NO EVENTS, PRESS 'MENU'
  
```

or:

```

FW n ZONE NO: YYY, ADDRESS NO. XX
NUM. OF PW: NN MORE INFORMATION PRESS ↵
  
```

n - the order the prewarning was registered.

NN - number of prewarnings registered.

YYY - zone number

XX - address at prewarning

**Show status
fault**
9.2 Show status fault

Select "FAULT" by pressing "2" in the "SHOW STATUS"-menu.

SF - system-fault.	n - the order the fault was registered
FA - loop/detector fault	PP - output number
NN - total number of faults	XX - address
SS - number of system fault	YYY - zone
FF - number of loop/detector faults	ZZZ - zone-control

Press ↵ to get more information.

If ↵ is not pressed in a few sec. the text always return to the first fault message which was given.

The following text will appear in the display:

**SHOW-STATUS FAULT
NO EVENTS, PRESS 'MENU'**

**SF n, BATTERY VOLTAGE UNDER 22,5 VOLT
NUM. OF FAULTS: NN MORE INFO. PRESS ↵**

**SF n, OPEN CIRCUIT SOUNDER OUTP. PP
NUM. OF FAULTS: NN MORE INFO. PRESS ↵**

**NUMBER OF SYSTEM FAULTS: SS
SF n, BATTERY VOLTAGE UNDER 22,5 VOLT**

**NUMBER OF SYSTEM FAULTS: SS
SF n, LOW EXTERNAL 24 VOLT OUTP. P**

**NUMBER OF SYSTEM FAULTS: SS
SF n, EARTH FAULT TO MINUS**

**NUMBER OF SYSTEM FAULT: SS
SF n, SHORT CIRCUIT SOUNDER OUTP. PP**

**NUMBER OF SYSTEM FAULT: SS
SF N, MAINS FAILURE**

**NUMBER OF SYSTEM FAULT: SS
SF n, SWITCH S18.1 IS OPEN**

**NUMBER OF LOOP/DETECTOR FAULTS: FF
FA n, ZONE NO: 1, ADDRESS XXX, E0**

**Show status
disablements**

9.3 Show status disablements

Select "DISABLEMENTS" by pressing "3" in the "SHOW STATUS"-menu.

The following text might appear in the display:

```
SHOW-STATUS DISABLEMENTS
0 DISABLEMENTS IN PANEL
```

or:

```
SHOW-STATUS DISABLEMENTS
ZONE NO YYY RESTORE TT HOUR(S)
```

YYY - is the current zone.

TT - is disable time left. (The zone YYY will be restored in TT hour(s)).

(If more than one zone is disabled, there will be one message for each.)

Press ↵ and the following text might appear in the display:

```
SHOW-STATUS DISABLEMENTS
ADDRESS NO XX RESTORE TT HOUR(S)
```

XX is the current address.

tt is disable time left. (The address XX will be restored in TT hour(s)).

(If more than one address is disabled, there will be one message for each.)

Press ↵, and the following text will appear in the display:

```
SHOW-STATUS DISABLEMENTS
FIRE BRIG. RESTORE TT HOUR(S)
```

TT is disable time left. (The Fire Brigade/Fighters will be restored in TT hour(s)).

Press ↵, and the following text will appear in the display:

```
SHOW-STATUS DISABLEMENTS
SOUNDER OUTPUT PP RESTORE TT HOUR(S)
```

PP is the disabled sounder-output.

TT is disable time left. (The sounder output PP will be restored in TT hour(s)).

(If more than one sounder output is disabled, there will be one message for each.)

Press ↵, and the following text will appear in the display :

```
SHOW-STATUS DISABLEMENTS  
ZONE-CONTROL: ZZZ RESTORE TT HOUR(S)
```

ZZZ is the disabled zone-control output.

TT is disable time left. (The zone-control *ZZZ* will be restored in TT hour(s)).

(If more than one zone-control is disabled, there will be one message for each).

Press ↵, and the following text might appear in the display:

```
SHOW-STATUS DISABLEMENTS  
CONTROL-1 RESTORE TT HOUR(S)
```

TT is disable time left. (The Control-1 will be restored in TT hour(s)).

Press ↵, and the following text will appear in the display:

```
SHOW-STATUS DISABLEMENTS  
CONTROL-2 RESTORE TT HOUR(S)
```

TT is disable time left. (The Control-2 will be restored in TT hour(s)).

Press ↵, and the following text will appear in the display:

```
SHOW-STATUS DISABLEMENTS  
NN DISABLEMENTS IN PANEL
```

NN is the total number of disablements in panel.

By pressing ↵, the internal buzzer will be activated, and “SHOW-STATUS DISABLEMENTS” will restart.

If parts of the panel was disabled for 99 hours, the following text will appear in the display:

```
SHOW-STATUS DISABLEMENTS  
'part of the system' RESTORE UNDEF. (LOCAL)
```

or:

```
SHOW-STATUS DISABLEMENTS  
'part of the system' RESTORE UNDEF. (MASTER)
```

**Show-status
Stored-events****9.4 Show-status Stored-events**

This function is only available when the DIP-switch 18.7 is in position ON.

Select "STORED-EVENTS" by pressing "4" in the "SHOW-STATUS"-menu and the latest stored event will appear in the display:

DISABLE	PANEL FRONT	
FIRE BRIGADE	DATE 27.01.92	T1: 12.16


Example of stored events.

Use the ↵ key to scroll forward. Use the "9" to scroll backward.

Press "MENU" to return to "MAIN MENU".

System

10. System

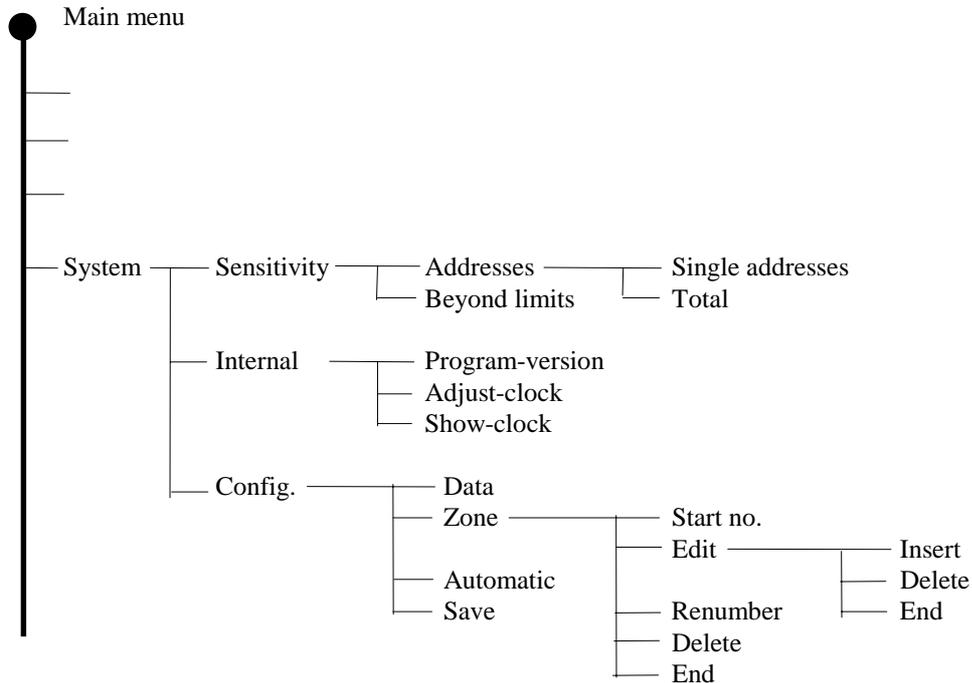

Select “SYSTEM” function by pressing “4” in “MAIN MENU”.

The following text will appear in the display:

```

SYSTEM:      1:SENSITIVITY    2:INTERNAL
             3:CONFIGURATION
  
```

The “CONFIGURATION” function is described in “Commissioning Handbook” for the BS-60.

The configuration function is only available when the DIP-switch S18.7 is in position ON.

Sensitivity

10.1 Sensitivity

Select “1” in the “SYSTEM” -menu, and the following text will appear in the display:

```

SYSTEM SENSITIVITY:
1:ADDRESS    2:BEYOND-LIMITS
  
```

The “SYSTEM SENSITIVITY” function enables the user to read the analogue measuring signals from the individual detector (address), or from all addresses connected to the control panel.

The analogue signal is automatically updated every 7th second.

Addresses

10.1.1 Addresses

Select “1” in the “SYSTEM SENSITIVITY”-menu, and the following text will appear in the display:

```
ADDRESS SENSITIVITY:
1:SINGLE-ADDRESSES  2:TOTAL
```

10.1.1.1 Single addresses

Select “1” in “ADDRESS SENSITIVITY”-menu, and the following text will appear in the display

```
ADDRESS: 00
```

Select address and press ↵.

```
ADDRESS: XX,    SENSITIVITY: ttt
WHEN COMPLETED PRESS 'MENU'
```

XX is the selected address.
ttt is the response time (ms)

Press ↵ and the system will suggest the next following address.

The analogue signal is indicated in milliseconds, and the value might alter slightly at each update due to minor environmental changes.

Values:

- 32 ms = detector fault
- 34 - 110 ms = normal value
- 112 - 126 ms = prewarning
- 128 - = fire alarm

10.1.1.2 Total

The system will measure all addresses (detectors) connected to the loop one by one.

Select “2” in “ADDRESS SENSITIVITY”-menu, and the following text will appear in the display:

```
ADDRESS XX,    SENSITIVITY: ttt
WHEN COMPLETED PRESS 'MENU'
```

XX is the current address
ttt is the measured value.

Press “MENU” to return to “MAIN MENU”.

10.1.2 Beyond-limits

Select “2” in “SYSTEM SENSITIVITY”-menu, and the following text will appear in the display:

**ADDRESSES SENSITIVITY BEYOND LIMITS:
HIGH LEVEL: 100 LOW LEVEL: 050**

Enter high level value (mS) and press ↵.

Enter low value (mS) and press ↵.

The system will measure all addresses (detectors) connected in the loop.

Each detector address beyond limits will be indicated for approx. 5 seconds in the display:

**SENSITIVITY BEYOND LIMITS TESTING:
ADDRESS: XX ttt PRESS ↵ TO STOP**

XX is the current address beyond limit.

ttt is the measured value (mS)

This sequence will automatically be ended when all detector addresses beyond limits are listed, or when ↵ is pressed.

The following text will appear in the display:

**SENSITIVITY BEYOND LIMIT TESTING:
ALL EXAMINED. NN BEYOND LIMITS**

NN is the number of detectors beyond limits.

Press ↵ to restart the “SENSITIVITY BEYOND LIMIT TESTING” or “MENU” to return to “MAIN MENU”.

Internal

10.2 Internal

Select “INTERNAL” by pressing “2” in the “SYSTEM”-menu, and the following text will appear in the display:

**SYSTEM INTERNAL: 1:PROGRAM-VERSION
2:ADJUST-CLOCK 3:SHOW-CLOCK**

The “ADJUST-CLOCK” and the “SHOW-CLOCK” function is only available when the switch S18.7 in position “ON”.

10.2.1 Program version

Select “PROGRAM VERSION” by pressing “1” in “SYSTEM INTERNAL”-menu, and the following text will appear in the display:

```
BS-60 201 COPYRIGHT © 1992 AUTRONICA
PRESS 'MENU'
```

10.2.2 Adjust-clock

Select “ADJUST-CLOCK” by pressing “2” in the “SYSTEM INTERNAL”-menu, and the following text will appear in the display:

```
ADJUST DATE (dd.mm.yy) AND TIME (hh.mm)
DATE: DD.MM.YY      TI: HH.MM
```

DD.MM.YY - Current date
HH.MM - Current time

Enter the correct day and press ↵, enter the correct month and press ↵ so..

When all corrections are done, the following text will appear in the display:

```
SHOW DATE AND TIME
DATE: DD.MM.YY      TI: HH.MM
```

Press “MENU” to return to the “MAIN MENU”.

10.2.3 Show-clock

Select “SHOW-CLOCK” by pressing “3” in the “SYSTEM INTERNAL”-menu, and the following text will appear in the display:

```
SHOW DATE AND TIME
DATE: DD.MM.YY      TI: HH.MM
```

DD.MM.YY - Current date
HH.MM - Current time

Press “MENU” to return to the “MAIN MENU”.

Configuration**10.3 Configuration**

See "Commissioning handbook" - BS-60 sec. 4 - Configuration.

Service**11. Service**

See "Commissioning handbook" - BS-60 sec. 5 - Service.