

# Fire alarm control panel BS-60



## Operation

### In the event of fire/prewarning:

1. Respond to your local "Fire alarm instruction".
2. The text display and the zone indicator indicates the exact location of the alarm / prewarning.
3. Press **SOUNDER SILENCE** when the situation is under control.
4. Press **RESET** when the situation is normal.

### Operating buttons:

- SOUNDER SILENCE:** Stops all alarm devices.  
A second press will reactivate all alarm devices.
- MORE ALARMS:** Scrolls all alarms (zone/address) in bottom line display.
- RESET:** Resets all alarms, prewarnings and faults.

### Indicators:

- Text display:** Indicates the exact location (zone/address) of the alarms, prewarnings and faults
- FIRE:** Red lamp, illuminates at fire alarm.
- MORE ALARMS:** Red lamp, illuminates when more alarms are present.
- ZONE(S) STILL IN ALARM COND.:** Yellow lamp, illuminates when an address is automatically disabled.
- FUNCTIONDISABLED:** Yellow lamp, illuminates when parts of the system are disabled.
- FAULT:** Yellow lamp, illuminates for any fault. Pulsating light.
- MAINS:** Green lamp, illuminates in normal condition.
- ALARM:** Red lamps for zone indication.
- DISABLED:** Yellow lamps for zone indication.
- Normal condition:** MAINS light is illuminated.

### In the event of fault:

1. The text display indicates the nature of the fault.
2. Press **SOUNDER SILENCE**.
3. Make sure that the fault is corrected.
4. Press **RESET** after the fault has been corrected.

For using the arrow keys, follow the instructions in "Operators Handbook"-BS-60.

Service needed,  
call :

