

System Status

- Show Alarms
- Show Pre Alarms
- Show Faults
- Show Disablements
- Show Tests
- Show Supervisory
- Show Activated Outputs/Inputs

- Door Control Units
- Standard Control Units
- Activated Fire Alarm Devices
- Other Outputs
- Activated Inputs
- All Outputs/Inputs by Type
- All Outputs/Inputs by Time

Disable

- Detection Zones
- Alarm Zones
- Points
- Fire Alarm Devices
- Loop Outputs
- Local Outputs
- Loop Inputs
- Local Inputs
- Routing Equipment
- Loop I/O Carriers

Disable
Time Span

Enable

- Detection Zones
- Alarm Zones
- Points
- Fire Alarm Devices
- Loop Outputs
- Local Outputs
- Loop Inputs
- Local Inputs
- Routing Equipment
- Loop I/O Carriers
- Day Mode

Enable /
Change
Disable
Time Span

Show Unit Properties

- Detection Zones
- Alarm Zones
- Points
- Fire Alarm Devices
- Loop Outputs
- Local Outputs
- Loop Inputs
- Local Inputs
- Loop I/O Carriers
- Mimic Panels
- Activation Groups
- External Interfaces
- Detection Loops
- Operator Panels

(Functions)

- Show Member Points
- Show Connected Units
- Show Member Fire Alarm Devices
- Show Neighbour Alarm Zones
- Show Activating Detection Zones

- Show Connected Units
- Show Connected Units

- (Not applicable to FAD, FARE and FWRE:)
- Show Activating Detection Zones
 - Show Activating Points
 - Show Activating Inputs
 - Show Activation Groups
 - Show Activating Outputs

- (Not applicable to FARE and FWRE:)
- Show Connected Units

- Show Connected Units

- Show Connected Units

- Show All Carrier Units
- Show Carrier Points
- Show Carrier Inputs
- Show Carrier Outputs

- (Applicable only if Mimic Panels are used)
- Show Mimic Boards

- Show Member Points
- Show Connected Units

Report

- Read Log
 - All Log Entries
 - Alarms
 - Alarms and Activations
 - Faults
 - Enable and Disable
 - Tests
 - Supervisory
 - Metrics
 - Internal Errors
- Show Topology
- Show Date and Time
- Software Version Info
- Configuration Version Info

- Show Serial Port Settings
- Show IP Address Settings
- Show ESPA
- Show MODBUS
- Show VDR
- Show Remote Access
 - Show Settings
 - Show Events
 - Show Receivers
 - Show Settings
 - Show Status Registers
 - Show Command Registers
 - Show Server and Web Access
 - Show User Management
 - Show Clients
 - Show Client Proxy Server

Enter Service Mode

(turn the page)

