



## In the event of fire alarm/prealarm:

1. Follow the “**Fire-alarm instructions**”
2. The fire-alarm panel display indicates the location of the alarm
3. Press **SILENCE** on the fire-alarm panel when the situation is under control. This will reset the voice-alarm system
4. Press **RESET** on the fire-alarm panel when the alarm area has been checked and found to be okay

## In the event of faults on voice-alarm panel:

1. The fire-alarm panel display indicates that an error has occurred
2. Press **SILENCE** on the fire-alarm panel
3. Check the voice-alarm panel for faults
4. Ensure that the fault is corrected
5. Press **RESET** on the fire-alarm panel when the fault is corrected

## Operation buttons:

- MICROPHONE:** Operated by selecting the desired zone or all zones, and pressing SPEAK
- EVACUATION:** Evacuation messages are broadcast in all loudspeaker zones
- ALL CLEAR:** «All clear» messages are broadcast in all loudspeaker zones
- SYSTEM TEST:** System test messages are broadcast in all loudspeaker zones
- RESET:** Ends the current message
- ZONE BUTTONS:** One button for each of the loudspeaker zone (for use with the SPEAK button and the microphone)
- ALL ZONES:** Selects all zones for the microphone
- SPEAK:** To activate the «chime» and the microphone, push and hold this button

## Lamps:

- EVACUATION:** Lit when evacuation message is broadcast over the system. Switches off when RESET is pressed
- ALL CLEAR:** Lit when ALL CLEAR button is pressed. Switches off when RESET is pressed
- SYSTEM TEST:** Lit when SYSTEM TEST is pressed. Switches off when RESET is pressed
- RESET:** Lit when a message is activated. Switches off when RESET is pressed
- FAULT:** Lit if a system fault is detected. Switches off automatically when the fault is corrected
- POWER:** Lit when the panel is in a state of normal operation
- ALL ZONES:** Lit when ALL ZONES is pressed. Switches off when ALL ZONES is pressed again
- ZONE:** Lit for each selected zone. Switches off when ZONE is pressed again

## Normal operation:

Only the green POWER lamp is lit

### If you need assistance, please contact:

Autronica Fire and Security AS, N-7483 Trondheim, Norway  
Phone: 73 58 25 00, Fax: 73 58 25 01

